


SIDE VIEW

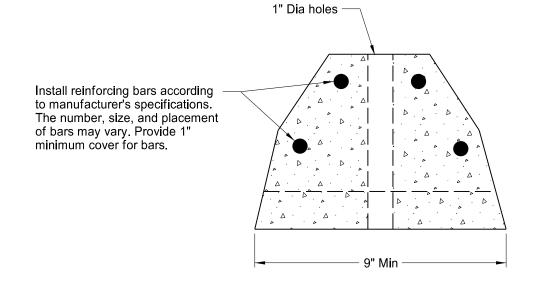

SECTION

# NOTES:

Furnish and install concrete wheel stops in locations shown on the plans or designated by the Engineer.

## Materials:

Use size 3, 4, or 5 coarse aggregate for concrete.

## Construction Details:

Set precast wheel stop on top of pavement with both ends bearing evenly on the pavement. Drive an iron pin into the underlying pavement through the hole at each end of the wheel stop. If necessary, pre-drill a hole in the pavement.

Method of Measurement & Basis of Payment: Include all costs for materials, labor, tools, equipment, and incidentals necessary to install precast concrete wheel stops at the locations designated on the plans in the unit price bid for "Precast Concrete Wheel Stop."

Γ	NORTH DAKOTA	
	DEPARTMENT OF TRANSPORTATION	
Γ	07-19-10	
Γ	REVISIONS	
Γ	DATE	CHANGE
	10-17-17 08-27-19	Updated to active voice. New Design Engineer PE Stamp.
-1		

This document was originally issued and sealed by Kirk Hoff, Registration Number PE-4683, on 8-27-19 and the original document is stored at the North Dakota Department

of Transportation